



HIGH-PERFORMANCE DIGITAL VOLTMETER

BEDIENUNGSANLEITUNG

MANUAL

EN
SERIES



CE


DVM12

DVM12

Klemmen Sie zu allererst die Stromversorgung (Batterie) des Fahrzeugs ab.
Schließen Sie das blaue Kabel des **DVM 12** an den Antennen/Remoteausgang Ihres Steuergerätes an oder verwenden Sie einen Schalter, um den digitalen Voltmeter ein- und auszuschalten.
Verbinden Sie danach den Pluspol [+12 Volt] an das rote Kabel des **DVM 12**. Nehmen Sie die +12 V Spannung unbedingt hinter einer Sicherung ab. Danach verbinden Sie den Minuspol [schwarzes Kabel] mit der Masse.

!.. ACHTUNG ..!

Bevor Sie die Stromversorgung wieder anschließen, vergewissern Sie sich, dass alle Kabel dem Schaltbild entsprechend angeschlossen und ordnungsgemäß verlegt sind.
Sorgen Sie für eine professionelle Befestigung des **DVM 12**.

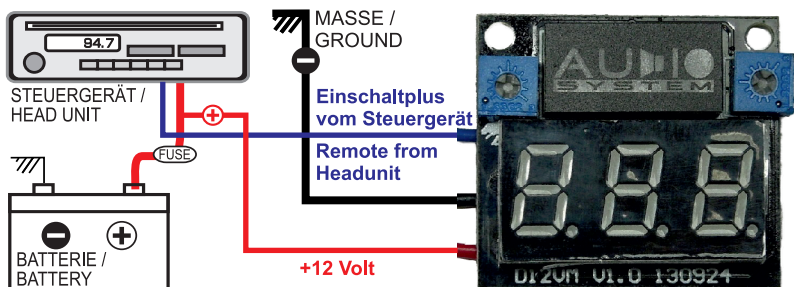

First disconnect the power supply (battery) of the vehicle.
Connect the blue cable of **DVM 12** to antenna/remote output of the head unit or use a switcher to turn on/off the digital voltmeter.
Bond the positiv pole [+12 volt] to the red cable of the **DVM 12**. Important: Connect the + 12 voltage after a fuse. Afterwards, connect the negativ pole [black cable] with the ground of the car chassis.

!.. CAUTION ..!

Before reconnecting the power supply (battery) make sure that all cables are connected and layed correctly accordingly to the circuit diagram. Take care of a professional attachment for the **DVM 12**.